


TEGIWA

I M P O R T S

Newage Impreza Brake Stopper

Tools needed

- 10mm socket/ratchet
- 10mm spanner
- 13mm spanner
- 6mm Hex Key

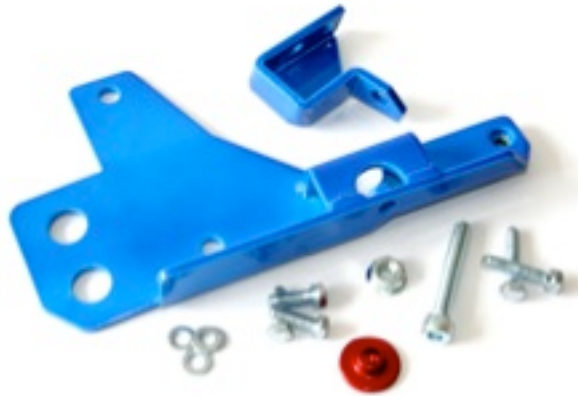

- Remove the existing black cable plate (2 bolts)



TEGIWA

I M P O R T S

- Take the small blue part out of the box and bolt it on to the corner of the suspension turret as shown below. Use 2 M6x20 bolts with 2 washers behind the plate for each bolt. Tighten the bolt with a 10mm spanner.



- Take the large blue bracket out of the box and bolt it to the small bracket with a M6x20mm bolt.
- Now put the original cable plate back into position and use the 2 M6x30 bolts to go through the plate, through the large blue part and into the chassis.
- Make sure all the bolts are tight
- Now put the M8 flange washer onto the stopper bolt and thread it into the brake stopper. Place the red cap on the end and then wind the bolt in so it is finger tight against the Brake Master Cylinder.
- Now tighten the M8 flange nut with a 13mm spanner to make sure that the bolt will not come undone.

TEGIWA

I M P O R T S



Below is how it should look once fitted. Note - We removed the metal cable bracket for a better look.

